



**SILENT  
KNIGHT**  
FIRE SYSTEMS<sub>®</sub>

## Model 5204 Fire Control/Communicator Panel Built-in Touchpad Operating Instructions

These instructions must be framed and displayed next to the Model 5204 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

Function	Enter (On Built-in Touchpad):	On 5230, also enter:
System test	<b>0</b> <b>ENTER</b>	+ Code 0 or 1
Reset alarms (or smoke det.)	<b>1</b> <b>ENTER</b> + Code 0 or 1	Same
Clear alarm memory	<b>2</b> <b>ENTER</b>	+ Code 0 or 1
Reset dialer	<b>3</b> <b>ENTER</b> + Code 0	Same
Start download	<b>4</b> <b>ENTER</b> + Code 0	Same
Alarm memory display	<b>5</b> <b>ENTER</b>	+ Code 0 or 1
Display troubles	<b>6</b> <b>ENTER</b>	+ Code 0 or 1
Silence troubles or alarms	<b>SILENCE</b>	+ Code 0 or 1
Disable/Enable	Zone #1-4 + <b>DISABLE</b>	Same
Begin fire drill	<b>2</b> <b>0</b> <b>ENTER</b> + Code 0	+ Code 0 or 1
End fire drill	<b>SILENCE</b>	+ Code 0 or 1
<i>The system sounds an alarm and reports a fire test when you exit fire drill mode.</i>		

Function	Enter (On Built-in Touchpad or 5230):
Walk test	<b>2</b> <b>2</b> <b>ENTER</b> + Code 0 *
Zone Troubleshooting mode	<b>2</b> <b>5</b> <b>ENTER</b> + Code 0 *
Step Programming mode	<b>2</b> <b>7</b> <b>ENTER</b> + Code 0 *
Clear (start over if you make a mistake)	<b>CLEAR</b>
Set time	<b>9</b> <b>ENTER</b> + 6-digit date
For example, to set the time of Wed., 4:30 p.m., enter:	Use <i>w d h h m m</i> format for time, where: <i>w</i> = Day of week (0=Sun., 1=Mon., 2=Tue., 3=Wed., 4=Thu., 5=Fri., 6=Sat.) <i>d</i> = Time of day (0=AM, 1=PM) <i>hh</i> = Hour (enter leading 0 for 1-digit hrs.) <i>mm</i> = Minutes (enter leading 0 for 1-digit min.)
	<b>3</b> <b>1</b> <b>0</b> <b>4</b> <b>3</b> <b>0</b>

\* To exit these modes with the 5230, press **STEP** **STEP** **CLEAR** **CLEAR**.

With the built-in touchpad, press **SILENCE** **SILENCE** **CLEAR** **CLEAR**.

For service call: